

How to change your filter tap

- 1 Turn mains water off under sink or at mains meter.
- 2 Turn Filter tap on at the sink to release pressure.
- 3 With scissors cut the plastic hose close to the inlet and outlet of the Filter tap filter housing (2 hoses).
- 4 Remove Filter Housing from under sink and discard in plastic recycling bin.
- 5 Carefully look at new Atlantis replacement filter and push outlet hose in hard until it reaches the end to connect with flow arrow flowing to filter tap on sink.
- 6 Push the other hose hard into the inlet at the other end until it reaches end of the Atlantis Filter.
- 7 Turn isolation tap back on under the sink or at mains meter.
- 8 Turn filter tap on top of sink if not already on and leave on for 10 minutes to flush new filter, turn off filter tap on top of sink.
- 9 Check for leaks, if any turn isolating tap off under sink & call your plumber.
- 10 Your new Atlantis Filter is ready to go.

Atlantis

We will contact you in 12 months, however this does not mean the filter needs to be replaced, if the flow & taste is still excellent then

we will contact in another 3 months. It's up to you whether you change it or not only \$39.99

